

## Dear Customer

### ◆ About the Upgrade of the Firmware

Model No. DC-GF10/DC-GX880  
 DC-GF9/DC-GX800/DC-GX850  
 DC-TZ200/DC-TZ202/DC-TZ220/DC-ZS200/DC-ZS220  
 DC-TZ90/DC-TZ91/DC-TZ92/DC-TZ93/DC-ZS70  
 DMC-LX10/DMC-LX15

The following functions were added or changed from Ver. 1.2 of the firmware.  
 Please read this in conjunction with the operating instructions for the camera.

- The firmware version can be checked from the [Version Disp.] of the [Setup] menu.


**[Exposure Comp. Disp. Setting] has been added to the [Custom] menu.**

This sets the operations of the ▲/▼ buttons in the exposure compensation screen.

**MENU** →  [Custom] → [Exposure Comp. Disp. Setting] →  
 [Cursor Buttons (Up/Down)]

- For DC-TZ200/DC-TZ202/DC-TZ220/DC-ZS200/DC-ZS220

**MENU** →  [Custom] →  [Exposure] →  
 [Exposure Comp. Disp. Setting] →  
 [Cursor Buttons (Up/Down)]

	When performing exposure compensation, the Exposure Bracket can be set with the ▲/▼ buttons.
[OFF]	When performing exposure compensation, the Exposure Bracket cannot be set.

- The default setting is [OFF].